


Ornament


The ornament is basically a hollow wood sphere capped on both ends with contrasting finials.

Turn your piece into a cylinder.



Mark one end about a quarter inch.

Mark the center.

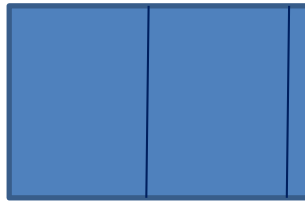


Turn a tenon on one end.




Reverse and put in a chuck.

Drill a 1/2" hole through.

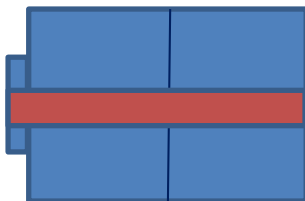


Support with a cone center and

Turn an approximate sphere.

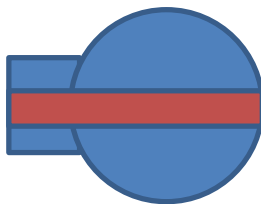

Remove live center and hollow


Sphere.

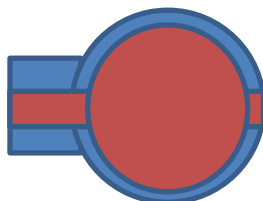

Hollowing tool made from an allen wrench.

On the bent end grind down about 1/2 way and grind a round end at about 60 degrees.

Insert in a handle you make.

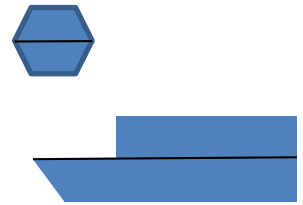

Part off and shape a cone on the scrap

Or another piece of scrap.

Reverse and take off the leftovers.

Sand.

Finials

Use a contrasting wood and make a cylinder. Ensure the diameter overlaps the holes.

Turn a tenon about a third way to one end and 3/8's long to fit the 1/2" hole.

Turn a decorative finial and top. For the finial thinner is better.

Sand the top and finial and part off in the middle of the tenon.

Glue to the sphere. Finish and add a small eye screw to the top. Done!

